

The Progress Group  
1265 N. Grove St. Unit B  
Anaheim, CA 92806  
714 630-9017 Phone  
714 630-9018 Fax

## INSTALLATION INSTRUCTIONS

Progress Technology  
2005-> Ford Mustang


**NOTE: Progress Technology springs should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.**

### Parts List


<u>Item</u>	<u>Quantity</u>
Front springs	2
Rear springs	2
Decals	2
Instruction Sheet	1

### FRONT INSTALLATION


Raise vehicle and support with stands. Refer to the owner manual for proper jack and stand position. Remove wheels and tires.

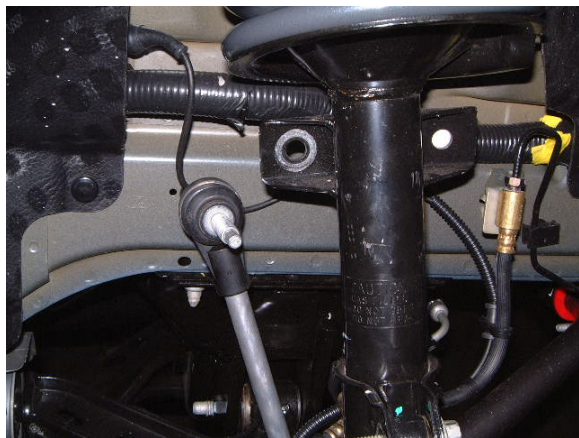

Remove end link from the strut.

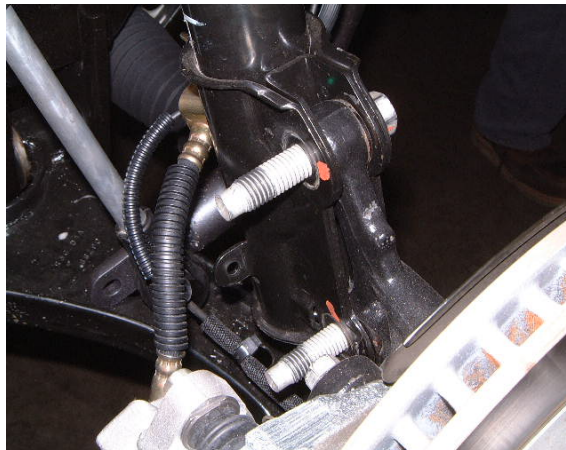

Remove brake lines, ABS wire and clevis bolts

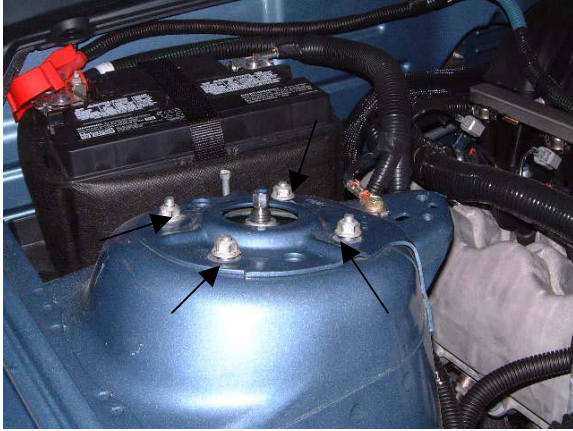


Remove the four bolts holding the strut in the vehicle.



Using a spring compressor remove the spring from the strut



Remove dust boot and bump stop

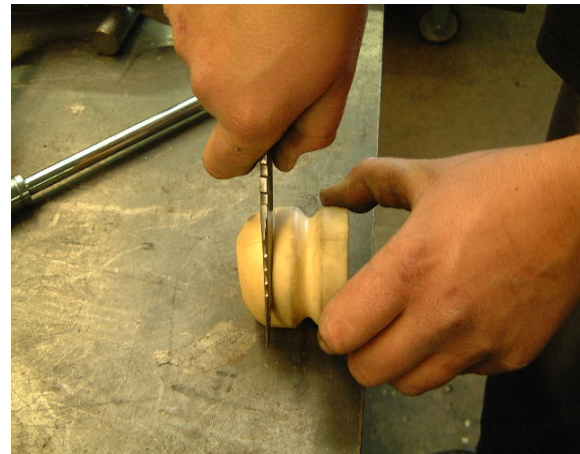

Trim bump stop




Place trimmed bump stop and dust boot back on the strut. Align spring on lower spring seat.



Align the upper spring mount with the spring keeping the alignment of the hat and vehicle in line. Torque all bolts to factory specifications.


## REAR INSTALLATION

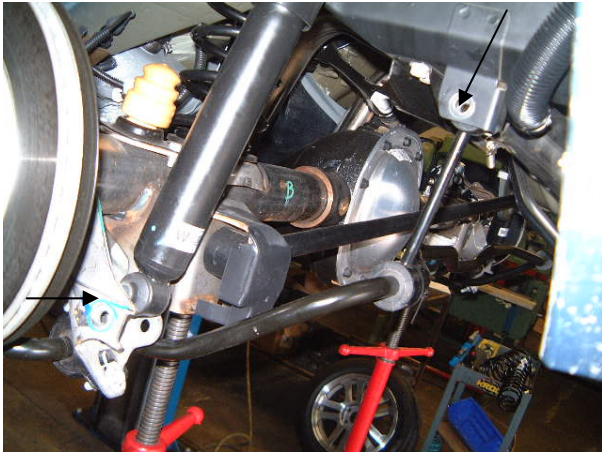

Support rear end with a floor jack or chassis stands. Remove the bolts from the lower shock mount and upper sway bar link.



Lower the jack or raise the vehicle to remove tension from the rear springs. Remove springs. Locate and trim the rear bump stops.

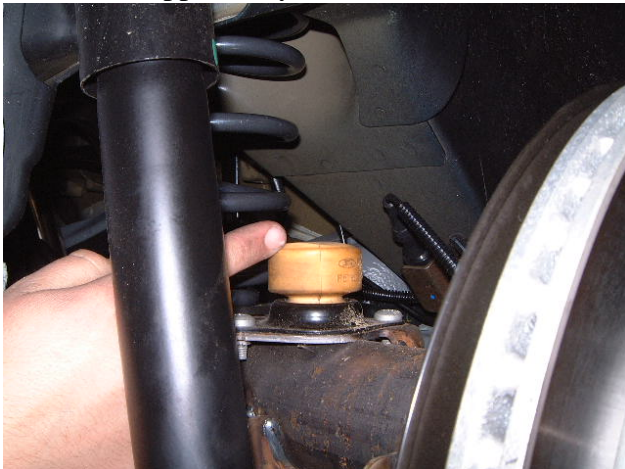

Install springs. Trimmed bump stop shown.



Rotate springs so that both spring ends point in the same direction. Torque all hardware to factory specifications.

Thank you for choosing Progress products. For additional product and technical information, visit our website at [www.progressauto.com](http://www.progressauto.com)