



INSTALLATION INSTRUCTIONS

Progress Technology Anti-Sway Bar

2009 Hyundai Genesis Coupe

Part #61.1310

No Revision (6/24/10)


WHO SHOULD INSTALL THIS PRODUCT?

Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.


Parts List

Description	Quantity	Description	Quantity
Bar, dia. = 1.062	1	Backing plate	2
Bushing 1.062 BORE	2	Lube	1
Bushing Bracket	2		


1. Park vehicle on a smooth, level, asphalt or concrete surface. Block rear wheels. Jack up front end of car and support with jackstands.

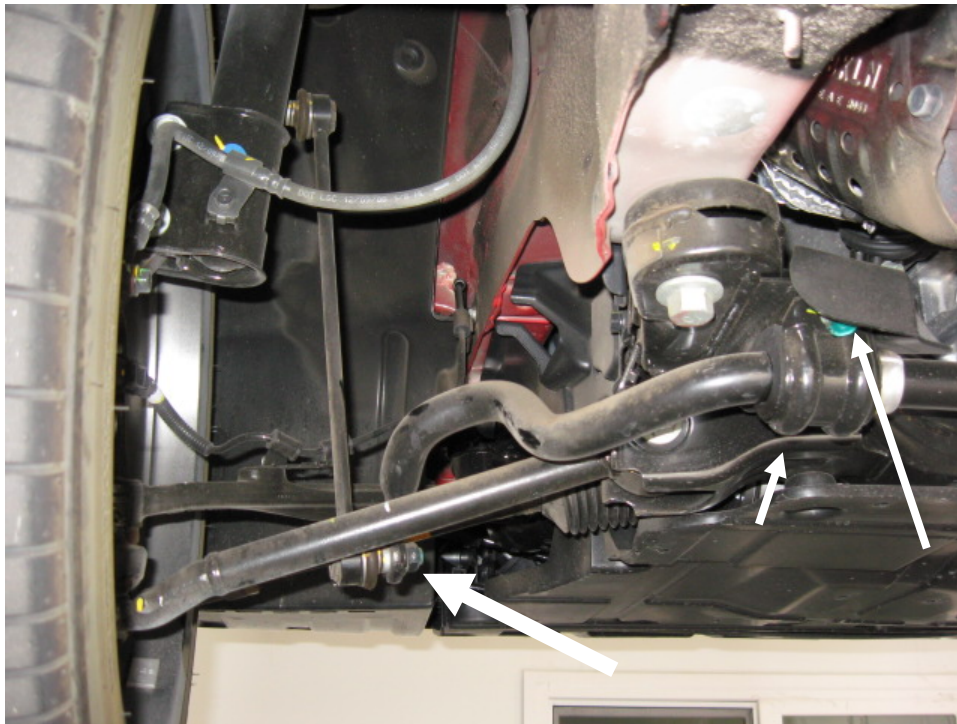

2. Remove end links from the bar end. Remove bushings and brackets. Remove stock bar.

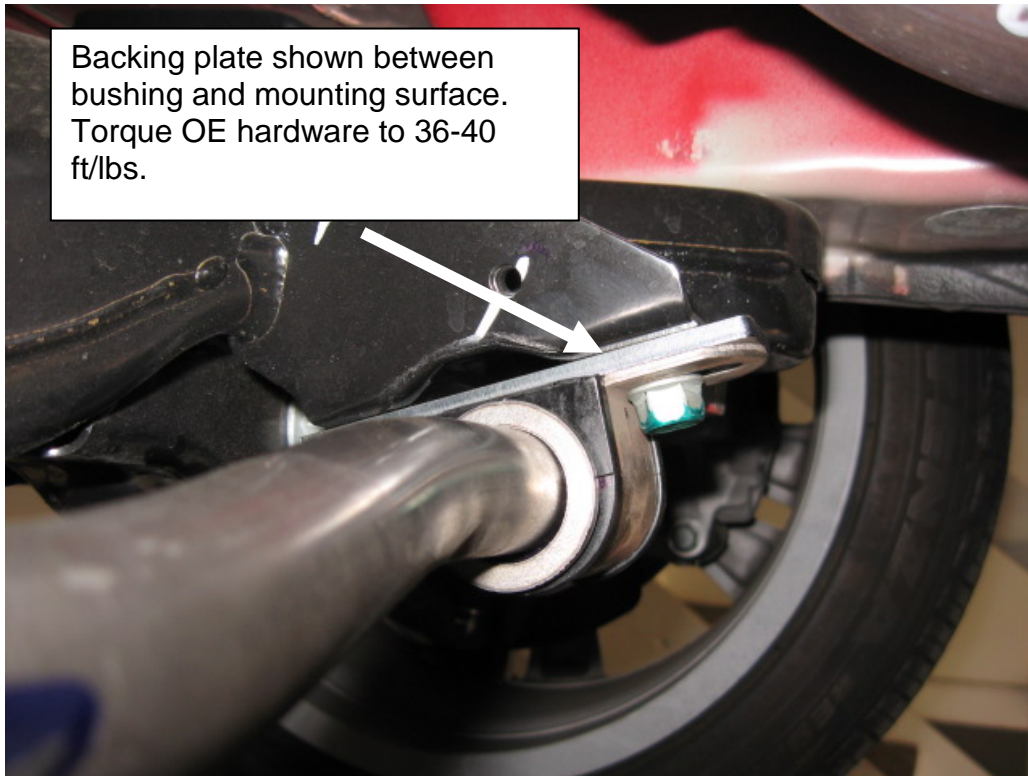

3. Apply grease to the inside of the new bushings. Use the backing plate between the chassis and the new bushing as shown. Attach your new Progress bar in the same position as the stock bar using factory hardware.

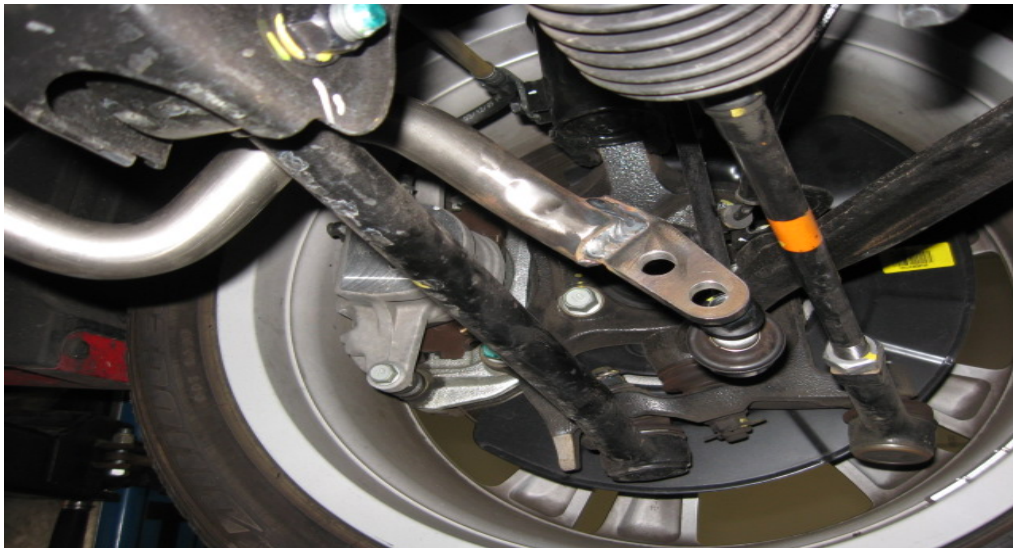

4. This is an adjustable bar; the hole toward the rear of the car is the stiffest setting.
5. Tighten end links to the bar and bushing brackets to the chassis.
6. Installation is complete. Check assembly periodically for tightness.

Thank you for choosing Progress products. For additional product and technical information, visit our website.