

INSTALLATION INSTRUCTIONS

Rear Sway Bar End link Kit
65.0105 2009+ Acura TSX
1/28/09


NOTE: Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

Parts List

<u>Item</u>	<u>Quantity</u>
1/2" Female Heim	4
1/2 – 20 Jam Nut	4
1/2 – 20 x 3.00 stud	2
Heim Reducer	4
M10 X 1.5 X 55 SHCS	4
M10 X 1.5 Flange Nut	4

1. This install is to be performed with the vehicle's suspension loaded in order not to preload the suspension. This can be achieved on a drive on lift or a pair of car ramps. Can be used with factory bar or aftermarket.
2. Use the supplied Heims and hardware in place of the factory units. Assemble as shown adjusting the length of the end link so there is no load on the bolts when installed.
3. Torque all hardware to 32-34 ft/lbs.

Thank you for choosing Progress products. For additional product and technical information, visit our website at www.progressauto.com

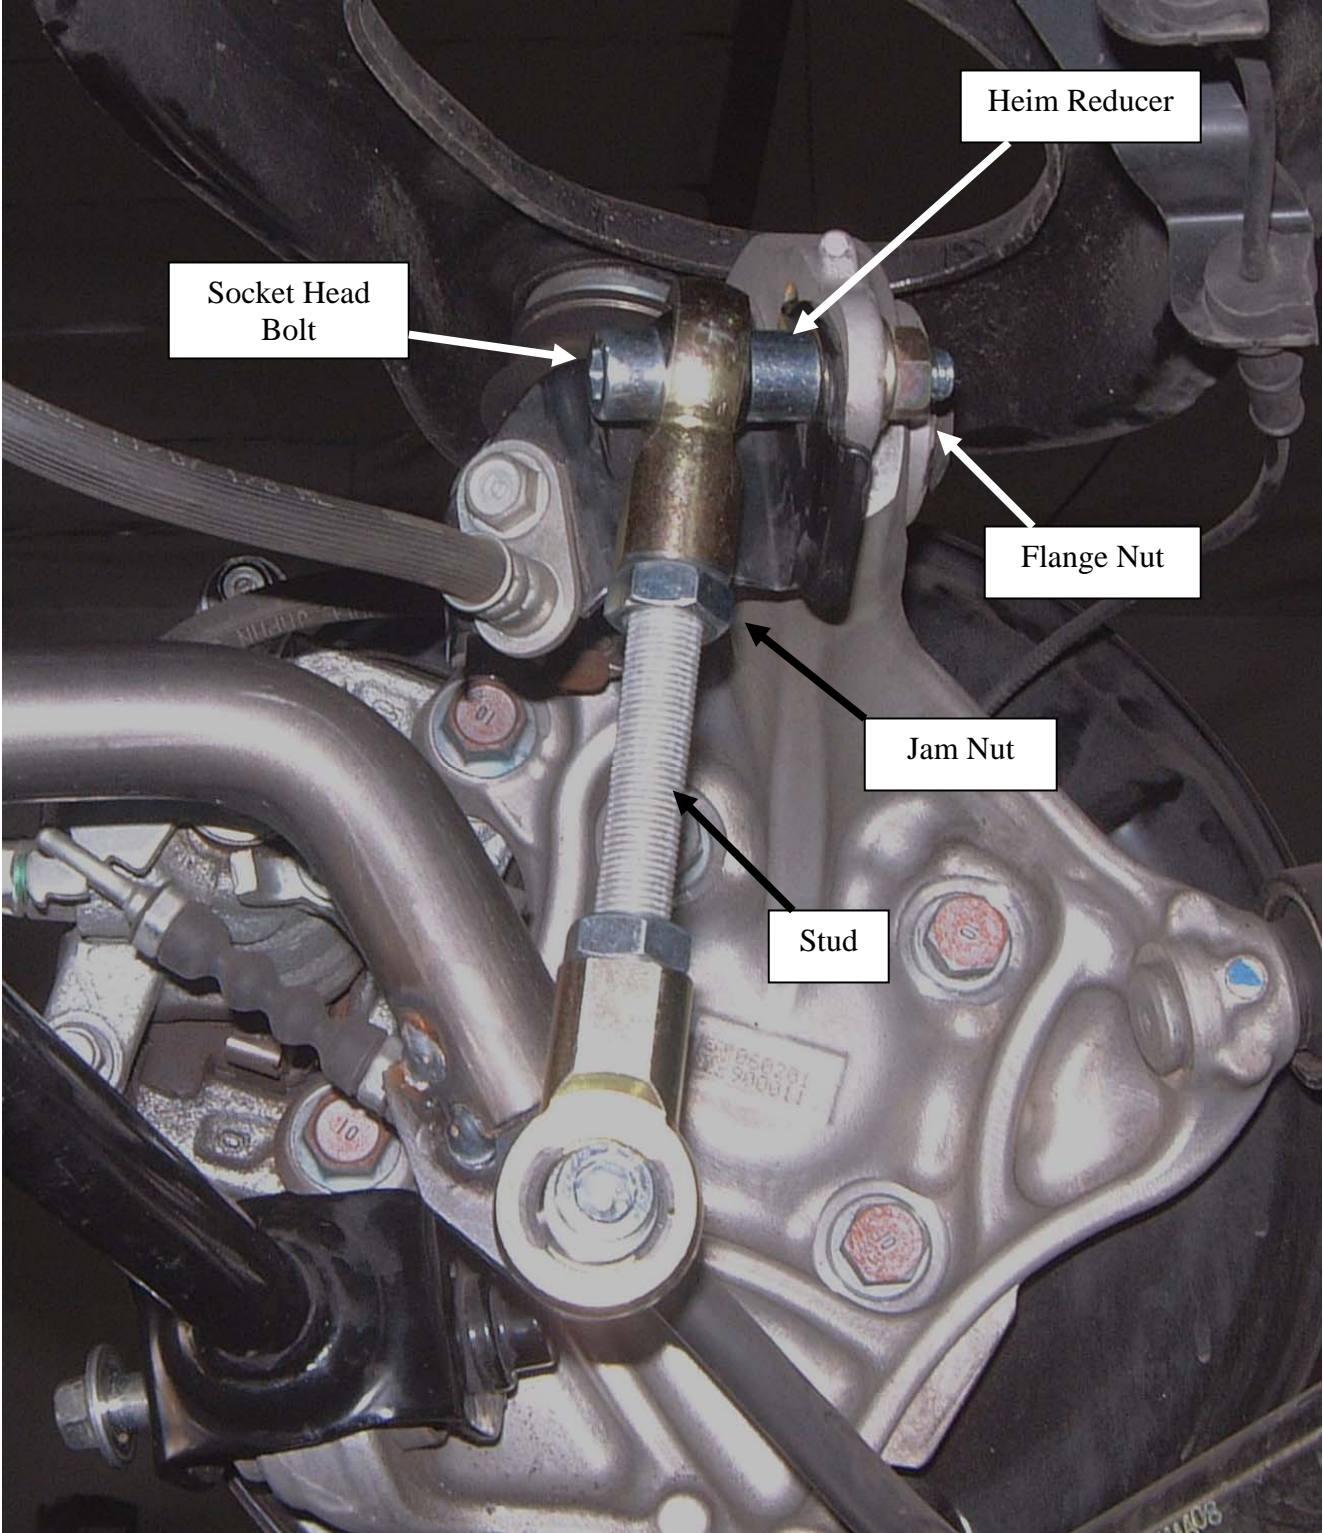

Heim Reducer

Socket Head Bolt

Flange Nut

Jam Nut

Stud