



## INSTALLATION INSTRUCTIONS

Rear Sway Bar End link Kit  
110mm - 132 mm (center to center)  
Part #67.10.120  
No Revision (5/1/2021)

### WHO SHOULD INSTALL THIS PRODUCT?

Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

### Parts List

Description	Quantity	Description	Quantity
M10 Link, Male w- Jam Nut	4	Instructions Rev. A	1
M10 Flange nut	2	Progress Decal 5 inch	2
M10 Center Connector	2		

1. This installation is to be performed with the vehicle's suspension loaded in order not to pre-load the suspension. This can be achieved on a drive on lift or a pair of car ramps. This end-link kit can be used with OEM (Original Equipment) or aftermarket sway bars.
2. Remove the OEM end link assemblies.
3. Assemble the new H-D end-links per the illustration (See Figure A). Adjust the length of the end-links to match the length of the OEM (Original Equipment) end-links.
4. Install the new H-D end-links in the same position as the OEM end-links.
5. Tighten the four jam nuts until they are snug against the connectors. Use two open end wrenches.
6. Torque the four M10 flange nuts to 42 ft/lbs. A 5mm hex wrench may be necessary hold the threaded stud while tightening until the nut is snug. Use a torque wrench and 41mm socket for the final tightening of the four flange nuts.

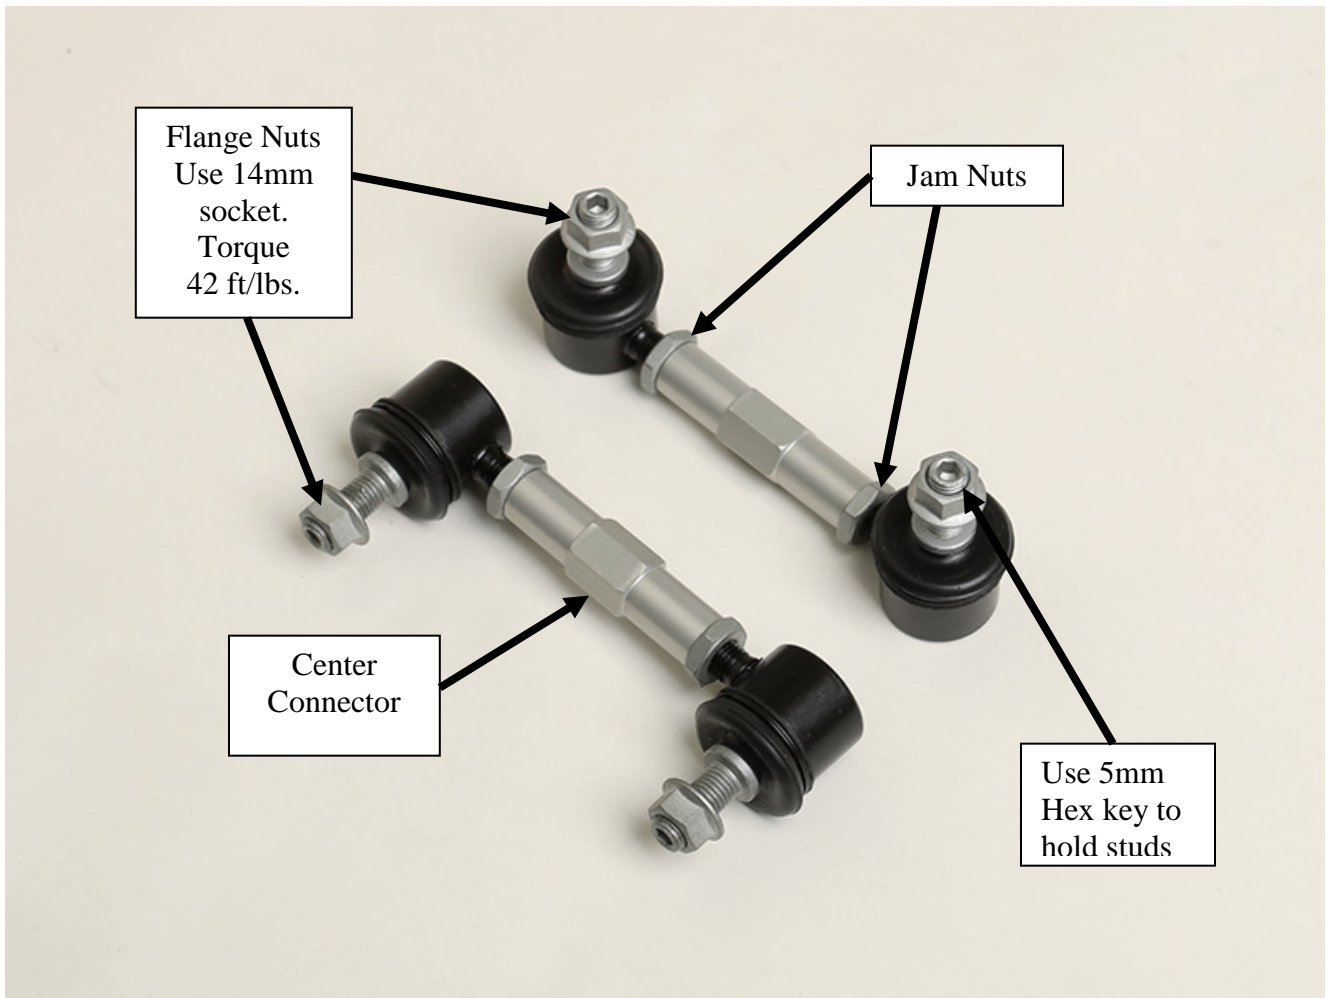


Figure A

**Thank you for choosing Progress products.  
For additional product and technical  
information, visit our website.**