



## INSTALLATION INSTRUCTIONS

Progress Technology Rear Anti-Sway Bar

2006 - 2011 Ford Fusion, Part # 62.0850

2003 - 2008 Mazda 6, Part # 62.1140

Revision A (5/22/2021)

### WHO SHOULD INSTALL THIS PRODUCT?

Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

### Parts List


Description	Quantity	Description	Quantity
24mm Sway Bar	1	U-bracket	2
Bushing	2	Backing Plate (Fusion only)	2
Lube	1		

1. Park vehicle on a smooth, level asphalt or concrete surface. Block front wheels. Jack up rear end of car and support with jack stands.
2. Remove the nuts that hold the end links to the bar. Next, remove the factory bushings and brackets, **keeping the hardware**. Remove the bar from the vehicle.
3. Locate the pivot "D" shaped polyurethane bushing and tube of special grease supplied in the hardware kit. Cut the end off the tube and apply grease to the bore of the bushing. Open bushing and snap them over the new sway bar, as positioned on the stock bar.

**Mazda 6 applications:** Do not use backing plate. Place the new bushing brackets (supplied) over the bushings. Tighten bushing brackets and end links to OEM specifications.

4. Your installation is complete. Check assembly periodically for tightness.

**Fusion applications:** Place the new bushing brackets (supplied) over the bushings. Place the backing plate behind the bushing and bushing bracket (Picture A). Tighten brackets and end links to OEM specifications.

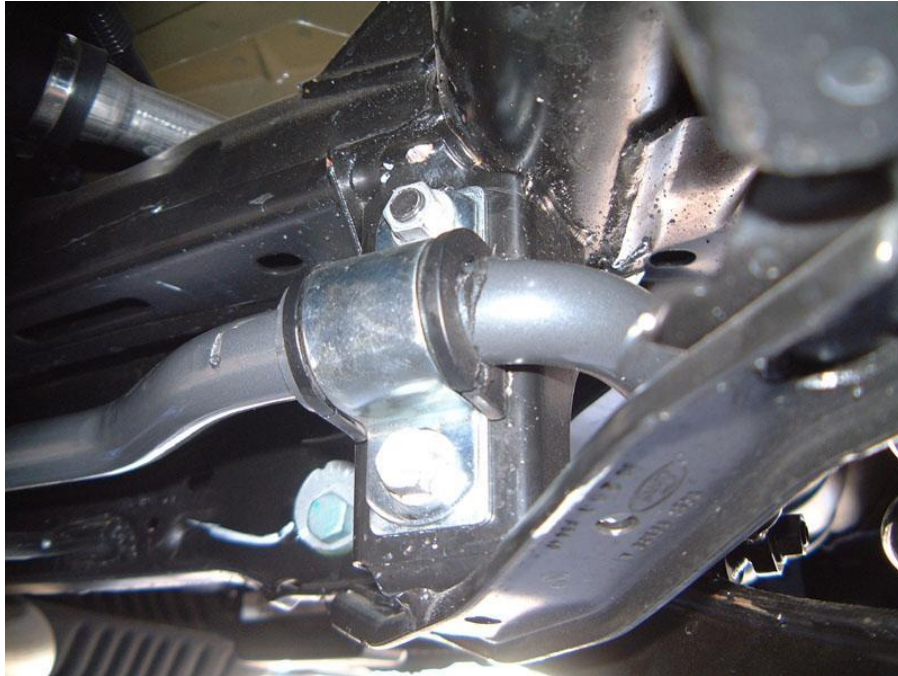

(A)

5. Installation is complete. Check assembly periodically for tightness.

**Thank you for choosing Progress products.  
For additional product and technical information,  
visit our website.**