



INSTALLATION INSTRUCTIONS

Rear Sway Bar End link Kit

2009+ Acura TSX

Part #65.0105

Revision A (03/29/2019)

WHO SHOULD INSTALL THIS PRODUCT?

Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

Parts List

Description	Quantity	Description	Quantity
M10 Link, Male w- Jam Nut	4	Instructions Rev. A	1
M10 Flange nut	2	Progress Decal 5 inch	2
M10 Center Connector	2		

1. This installation is to be performed with the vehicle's suspension loaded in order not to pre-load the suspension. This can be achieved on a drive on lift or a pair of car ramps. This end-link kit can be used with OEM (Original Equipment) or aftermarket sway bars.
2. Remove the OEM end link assemblies.
3. Assemble the new H-D end-links per the illustration (See Figure A). Adjust the length of the end-links to match the length of the OEM (Original Equipment) end-links.
4. Install the new H-D end-links in the same position as the OEM end-links.
5. Tighten the four jam nuts until they are snug against the connectors. Use two open end wrenches.
6. Torque the four M10 flange nuts to 42 ft/lbs. A 5mm hex wrench may be necessary hold the threaded stud while tightening until the nut is snug. Use a torque wrench and 41mm socket for the final tightening of the four flange nuts.

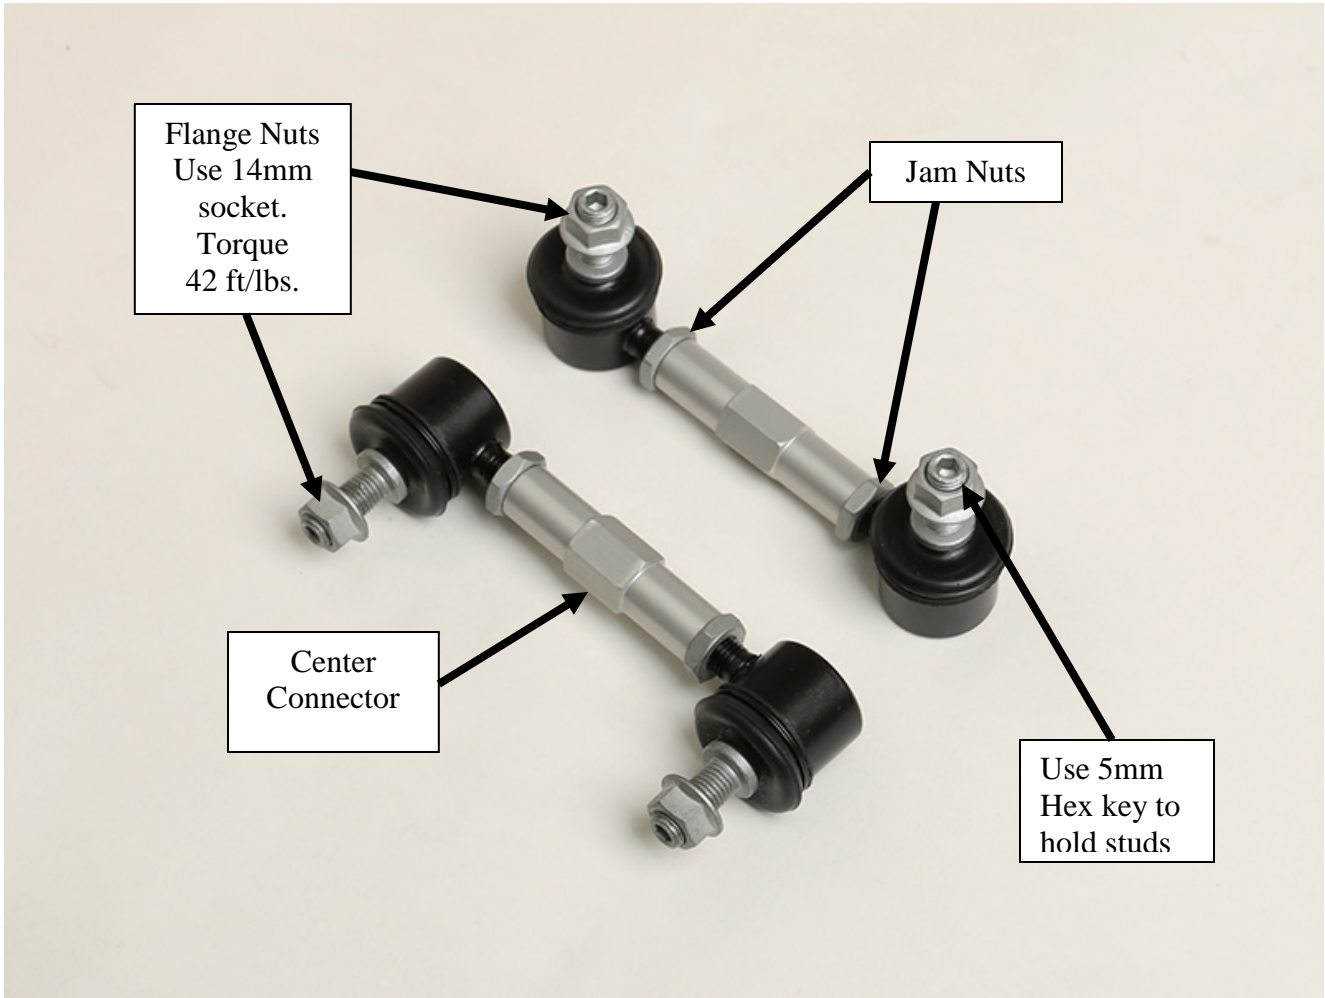


Figure A

Thank you for choosing Progress products. For additional product and technical information, visit our website www.progressauto.com