



## INSTALLATION INSTRUCTIONS

Progress Technology Rear Sway Bar Bushing/Endlink Kit  
2005 Ford Mustang  
Part #65.0808  
No Revision (5/23/05)


### WHO SHOULD INSTALL THIS PRODUCT?

Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

### Parts List

| Description              | Quantity | Description         | Quantity |
|--------------------------|----------|---------------------|----------|
| Bushing Bracket          | 2        | 3/8-16 x 1.25 HHCS  | 4        |
| D-Bushing                | 2        | 9/16 SAE Flatwasher | 4        |
| Endlink                  | 2        | 3/8 SAE Flatwasher  | 8        |
| (press bushing & sleeve) |          | 3/8-16 Nylock       | 4        |
| Endlink Bushing          | 4        | M12 x 1.5 x 60 HHCS | 2        |
| Endlink Spacer           | 2        | M12 Flatwasher      | 4        |
| Lube                     | 1        | M12-1.5 Nylock      | 2        |

1. Park vehicle on a smooth, level, asphalt or concrete surface. Block front wheels. Jack up rear end of car and support with jackstands.
2. Follow the sway bar install instruction. Use the supplied end links and hardware in place of the factory units. Insert the tapered bushings into the small end (non machined side) of the end links. Grease the sleeve and press it into the same side.
3. Attach end links to the chassis using the supplied 12mm hardware. In addition, use the 3/8 hardware to attach the bushing bracket and sway bar to the axel as shown.

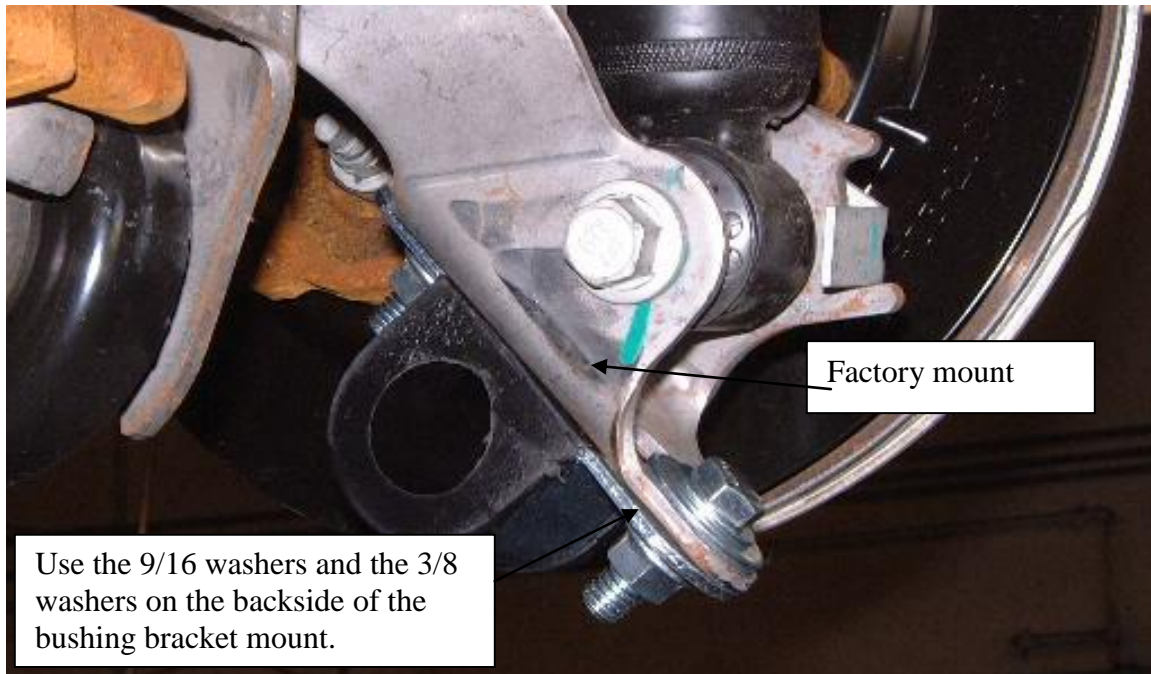

4. Torque bolts to 35-40 ft/lbs. Lower rear of car onto ground, and roll car back and forth to settle suspension.
5. Installation is complete. Check assembly periodically for tightness.

**Thank you for choosing Progress products. For additional product and technical information, visit our website.**